

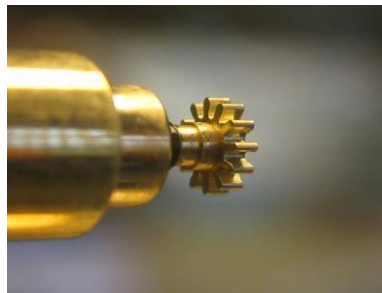


I made a brass support pin and glued the cannon pinion on it,

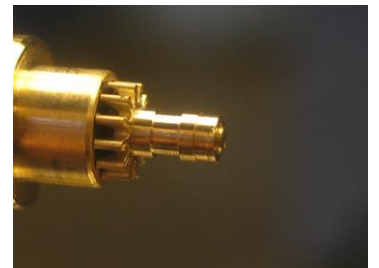


Chucked into the 8 mm lathe

I cut the center stot by hand

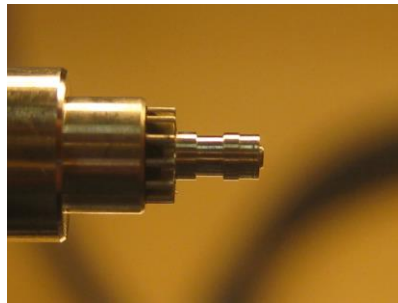

Unglued and turned on the other side, glued it again and removed all the burrs

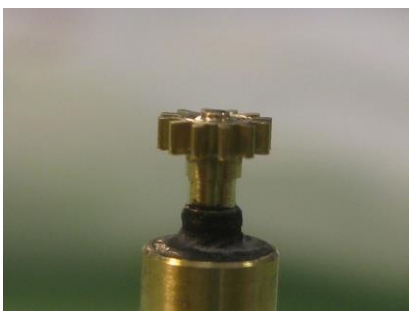

After removing the burrs

